

Polar Mounting Board

GRAPHIC DISPLAY BOARDS COATED WITH COLD ADHESIVE

INSTRUCTIONS



Figure 1



Figure 2



Figure 3

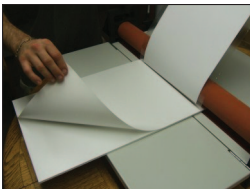


Figure 4

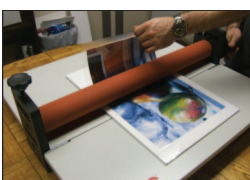


Figure 5

1. (Figure 1) Remove 2" of the cover sheet from one end of the board by either tearing against a straightedge (shown) or folding it back.

2. (Figure 2) Align your print on the board. Position your print at the covered end of the board and register on the bottom and side (use an alignment guide or a 90° corner if you have one). Because the bottom is still covered by the cover sheet, you can move your print until it is just where you want it.

3. (Figure 3) Tack your print to the board where you removed the 2" of the Coversheet in Step 1.

4. (Figure 4) Remove the remaining Coversheet on the board to expose the adhesive. If using a laminator (shown), insert the tacked edge into the laminator to hold your print and board and then remove the rest of the Coversheet exposing the adhesive on the board.

If you are not using a laminator, flip your print forward face down. Remove the Coversheet exposing the adhesive on the board.

5. (Figure 5) Roll Down your print. If you are using a laminator, hold your print smooth against the roll (If you have a Media Guide, insert your print between the Media Guide and top roller and close the Media Guide to hold your print against the roller. Then roll down your print to adhere it to the board.

If you are not using a laminator, holding your print up away from the board with one hand, use your other hand in the middle of the print to attach it first in the middle and then smooth from the center to the edge of the print.

6. Display your print. Trim if necessary. Hardware, easels, hangers and more are available if you need them to complete your display.